



Polar organic chemical integrative sampler (POCIS) uptake rates for 17 polar pesticides and degradation products: laboratory calibration

Intiaz Ibrahim, Anne Togola, Catherine Gonzalez

► To cite this version:

Intiaz Ibrahim, Anne Togola, Catherine Gonzalez. Polar organic chemical integrative sampler (POCIS) uptake rates for 17 polar pesticides and degradation products: laboratory calibration. Environmental Science and Pollution Research, 2012, pp.1-9. 10.1007/s11356-012-1284-3 . hal-00749855v1

HAL Id: hal-00749855

<https://brgm.hal.science/hal-00749855v1>

Submitted on 8 Nov 2012 (v1), last revised 14 Aug 2013 (v2)

HAL is a multi-disciplinary open access archive for the deposit and dissemination of scientific research documents, whether they are published or not. The documents may come from teaching and research institutions in France or abroad, or from public or private research centers.

L'archive ouverte pluridisciplinaire **HAL**, est destinée au dépôt et à la diffusion de documents scientifiques de niveau recherche, publiés ou non, émanant des établissements d'enseignement et de recherche français ou étrangers, des laboratoires publics ou privés.

1 **Polar-Organic-Chemical-Integrative Sampler**
2 **(POCIS) uptake rates for 17 polar pesticides**
3 **and degradation products: laboratory**
4 **calibration**

5 Imtiaz Ibrahim^{a,b}, Anne Togola^a, Catherine Gonzalez^b.
6

7 Authors
8

9 I.Ibrahim

10 *^aBureau de recherche géologiques et minières (BRGM), Laboratory Division, 3*
11 *avenue Claude Guillemin, 45100 Orléans, France*

12 *^bEcole des mines d'Alès (EMA), LGEI Center, 6 Avenue de Clavieres, 30319 Alès,*
13 *France*

14 i.imtiaz@mines-ales.fr

15 Tel: (+33)4.66.78.27.22; Fax: (+33)4.66.78.27.01
16

17 A.Togola

18 *^aBureau de recherche géologiques et minières (BRGM), Laboratory Division, 3*
19 *avenue Claude Guillemin, 45100 Orléans, France*

20 a.togola@brgm.fr

21 Tel: (+33)2.38.64.38.36 ; Fax: (+33)2.38.64.39.25.

22 C. Gonzalez

23 *^bEcole des mines d'Alès (EMA), LGEI Center, 6 Avenue de Clavieres, 30319 Alès,*
24 *France*

25 catherine.gonzalez@mines-ales.fr

26 Tel: (+33)4.66.78.27.65; Fax: (+33)4.66.78.27.01

27 **Abstract**

28 Polar organic chemical integrative samplers (POCIS) are useful for monitoring a wide range of
29 chemicals, including polar pesticides, in water bodies. However, few calibration data are available,
30 which limits the use of these samplers for time-weighted average concentration measurements in
31 an aquatic medium. This work deals with the laboratory calibration of the pharmaceutical

configuration of a polar organic chemical-integrative sampler (pharm-POCIS) for calculating the sampling rates of 17 polar pesticides ($1.15 \leq \log K_{ow} \leq 3.71$) commonly found in water. The experiment, conducted for 21 days in a continuous water flow-through exposure system, showed an integrative accumulation of all studied pesticides for 15 days. 3 compounds (metalaxyl, azoxystrobin and terbuthylazine) remained integrative for the 21-day experiment. The sampling rates measured ranged from 67.9 to 279 mLday⁻¹ and increased with the hydrophobicity of the pesticides until reaching a plateau where no significant variation in sampling rate is observed when increasing the hydrophobicity.

Keywords: *laboratory calibration, passive sampling, POCIS, polar pesticides*

Abbreviations

Polar organic chemical integrative sampler	POCIS
Pharmaceutical polar organic integrative sampler	Pharm-POCIS
Pesticide polar organic chemical integrative sampler	Pest-POCIS
Time weighted average	TWA
Desethylatrazine	DEA
Desisopropylatrazine	DIA
Desethylterbuthylazine	DET
Solid phase extraction	SPE
Polyethersulfone	PES
Ultra performance liquid chromatography	UPLC
Relative standard deviation	RSD
Reaction monitoring mode	MRM

Introduction

Over the past decades, many organic contaminants have been found in different aquatic environments. Among these pollutants, pesticides are mainly derived from agricultural activities (Schwarzenbach et al. 2006). Runoff over fields and infiltration caused by precipitation are the major causes of the presence of these agrochemicals in surface- and ground waters (Beltran et al. 1993). Pesticide pollution can be not only problematic for human health, considering drinking water, but also for aquatic organisms.

52 Continuous monitoring of pesticide concentrations in aquatic environments is necessary for
53 assessing the water quality (Liess et al. 1999), whereby sampling is a crucial step. The
54 conventional methods of screening for aquatic pollutants rely on the analysis of grab samples, but
55 these techniques generally do not provide appropriate information on variability of micro-
56 pollutants concentration in water. Spot sampling provides only a snapshot of pollutant
57 concentrations at the time of sampling and is often insufficient for detecting and quantifying trace
58 levels of contaminants in water. In addition, the concentration of pollutants can fluctuate
59 depending on environmental conditions, and frequent sampling is required to monitor contaminant
60 levels. However, increasing the sampling frequency means taking a larger number of water
61 samples, which is time consuming, laborious and expensive.

62 In environmental analysis, the development and application of monitoring techniques based on
63 passive sampling offer a new and alternative approach to monitoring programmes that rely on
64 collecting spot samples. Passive sampling, in contrast to spot sampling, enables determination of
65 the time-weighted average (TWA) concentration of water contaminants over long sampling
66 periods, permits the detection of trace and ultra-trace contaminants by the *in-situ* pre-concentration
67 of pollutants, and finally offers significant handling, use and economic benefits compared with
68 conventional grab-sampling techniques (Kot et al. 2000).

69 Various types of samplers exist with different design characteristics for the sampling of aquatic
70 organic pollutants of different polarities. Among the passive samplers available, the most widely
71 used for sampling polar organic pollutants are the Chemcatchers® (Kingston et al. 2000,
72 Greenwood et al. 2007, Vrana et al. 2007) and polar organic chemical integrative samplers
73 (POCIS). POCIS consists of a solid sequestration phase (sorbent) enclosed between two
74 hydrophilic microporous polyethersulfone (PES) membranes (porosity 0.1 μm). The surface area of
75 POCIS is 41 cm^2 , and two configurations are commercially available: pharmaceutical-POCIS
76 (pharm-POCIS) and pesticide-POCIS (pest-POCIS) (Alvarez et al. 2004).

77 The sorbent in POCIS samplers is usually based on polystyrene divinylbenzene combined with
78 active carbon in the case of pest-POCIS, or Oasis™ HLB sorbent in pharm-POCIS. This sampler
79 can retain a large range of polar organic pollutants from different classes of organic compounds,
80 such as pesticides, non-ionic detergents, polar pharmaceuticals, or natural and synthetic hormones
81 (Alvarez et al. 2004; MacLeod et al. 2007; Li et al. 2011; Pesce et al. 2011). Alvarez et al.
82 (2004) reported that pharm-POCIS is more suitable for organic polar compounds with multiple
83 functional groups, and Mazzella et al. (2007) mentioned that it is more convenient for the sampling
84 of basic and neutral herbicides. There are some practical advantages in using pharm-POCIS for
85 monitoring polar organic contaminants, including the use of less solvents than for recovering
86 analytes from pest-POCIS (Li et al. 2011).

87 A detailed description of these tools and their respective applications is available in the literature
88 (Alvarez 1999; Alvarez et al. 2004; Petty et al. 2004; MacLeod et al. 2007; Mazzella et al.
89 2007; Arditoglou and Voutsas 2008; Li et al. 2011; Pesce et al. 2011).

90 The POCIS approach has been used as a screening tool for determining the presence of possible
91 sources and relative amounts of organic contaminants in surface water and wastewater This
92 approach allows the detection of new compounds such as pharmaceuticals, detergent identified as
93 “emerging pollutants”, that cannot be detected by spot sampling, (Petty et al. 2004).

94 However, the use of POCIS as a quantitative tool for determining TWA concentrations requires
95 calibration studies for the estimation of sampling rates of the targeted compounds. To date, POCIS
96 sampling rates have been determined for only few pesticides(Mazzella et al. 2007; Togola and
97 Budzinski 2007;Arditsoglou and Voutsas 2008; Li et al. 2011). The theory of passive sampling was
98 described earlier as well (Alvarez et al. 2004;Mazzella et al. 2007; Togola and Budzinski 2007).

99 The objective of this study was to determine the sampling rates of 17 polar pesticides (Table 1) by
100 pharm-POCIS in a laboratory-calibration experiment, in order to use this sampler as a quantitative
101 tool for TWA concentration measurements in different aquatic environments. The studied
102 compounds were atrazine, simazine, desethylatrazine (DEA), desisopropylatrazine (DIA),
103 desethylterbuthylazine (DET), terbuthylatrazine, diuron, isoproturon, chlortoluron, linuron,
104 propyzamide, alachlor, metolachlor, acetochlor, metalaxyl, penconazole and azoxystrobin.

105 **Material and methods**

106 **Chemicals and materials**

107 All pesticides analytical standards (purity >98%) were provided by Dr.Ehrenstorfer (CIL, Sainte
108 Foy La Grande, France). Individual solutions of pesticides (500 mg L^{-1}) were prepared in
109 acetonitrile and stored in the dark at -18°C . Standard working mixtures of pesticides (3 mg L^{-1})
110 prepared in acetonitrile were used for the experiment. Deuterated labelled compounds, simazine-
111 d_{10} (98%) and atrazine- d_5 (97.5%) were obtained from Dr.Ehrenstorfer (see above) and were used
112 for recovery control and analytical control, respectively. Acetonitrile and methanol (HPLC grade)
113 were obtained from Fisher Chemical (Illkirch, France) and formic acid was from Avantor
114 (Deventer, the Netherlands).Water used for experimental processes was generated by a Millipore
115 direct-ultrapure water system with a specific resistance of $18.2 \text{ M}\Omega\text{cm}^{-1}$. OasisTM HLB extraction
116 cartridges (500 mg, $60 \mu\text{m}$) were purchased from Waters Corporation (Guyancourt, France).
117 Exposmeter SA (Tavelsjö, Sweden) provided the pharmaceutical POCIS samplers. Empty
118 polypropylene solid-phase extraction (SPE) tubes with polyethylene frits were purchased from
119 Supelco (Saint-Quentin Fallavier, France). An HPLC pump (ProStar 220, Varian, LesUlis, France)
120 and a peristaltic pump (Labcraft) were used in the experimental set-up for supplying water. An
121 Autotrace SPE workstation (Caliper Life Sciences, Villepinte, France) was used for the water-
122 sample processing and a Visiprep SPE Manifold (Supelco) was used for POCIS processing.

123 **Experiment design**

124 The POCIS calibration experiment was conducted in a 100 L stainless steel tank filled with tap
125 water ($\text{pH} = 8.3$) initially fortified at $1.1 \mu\text{g L}^{-1}$ of each target pesticide. The tank was designed to

contain an inert Teflon carousel, connected to an electric motor with an adjustable rotation speed for simulating turbulent conditions in water. For determining the sampling rates, 12 pharm-POCIS were initially immersed in the tank, attached to the carousel. To study the kinetic accumulation of pesticides in the POCIS, the samplers were successively removed from the tank in triplicate at set time intervals (5, 9, 15 and 21 days) and analysed to determine the amount of accumulated chemicals. In order to maintain the concentration of pesticides in water constant, the tank was continuously supplied with tap water spiked with pesticides at $1.1 \mu\text{g L}^{-1}$ with flow rate of 7 mLmin^{-1} . The volume of methanol added in the tank for the initial supplementation was very low (less than 0.03% of the total volume) and the volume of methanol added all along the experiment was estimated to 0.004% and doesn't change significantly the DOC value. The monitoring of pesticide concentrations in the tank during the experiment was done by sampling 200 mL of water in triplicate from the outlet of the tank at each time the POCIS were removed. The water temperature and pH in the tank were monitored during the experimental period and remained stable with a mean of 21°C (from 20.8°C to 21.5°C) for temperature and from 8.2 to 8.4 with a mean of 8.3 for pH. The carousel rotation speed was fixed at 10 rpm (0.115 ms^{-1}). Blank POCIS have been deployed during exposure in parallel, showing no contamination by targeted compounds during the experiment.

Sample treatment

After exposure, each POCIS was opened and the sorbent was recovered from the PES membranes with ultrapure water and transferred into a 1 mL empty SPE tube with a polyethylene frit and packed under vacuum by using the Visiprep SPE manifold. The sorbent was dried for 30 min under vacuum. Prior to extraction, $75 \mu\text{L}$ of atrazin-d5 (0.5 mg L^{-1}) was added during the sequestering phase. Pesticides were extracted by eluting under vacuum with 10 mL of acetonitrile. The eluate was evaporated under a gentle stream of nitrogen and the volume of the extract was reduced to 1 mL. After elution, the sorbent was dried at 40°C and weighted. All results were corrected by using the real mass of sorbent in each exposed sampler.

Water samples (200 mL) were extracted via SPE using the autotrace SPE workstation. The HLB cartridges were successively pre-conditioned with 5 mL acetonitrile, 5 mL methanol and then 5 mL of ultrapure water at 5 mL min^{-1} . Prior to extraction, each sample was fortified with 125 ng of atrazine-d5. The samples were passed through the cartridges under vacuum at a flow rate of 10 mLmin^{-1} . Before elution, the cartridges were dried under vacuum for 1 h. Analytes were recovered by eluting the cartridges with 8 mL of acetonitrile at a flow rate of 3 mLmin^{-1} . The sample volume was reduced to 1.5 mL under a gentle stream of nitrogen and transferred to an autosampler vial.

All sample extracts were spiked before analysis with $50 \mu\text{L}$ of the deuterated internal standard simazine-d10 (2 mg L^{-1}).

163 **Pesticide analyses**

164 All POCIS and cartridges extracts were analysed by UPLC-MS/MS. Liquid chromatography
165 separations were done in a Waters ACQUITY UPLC system (Waters, Guyancourt, France) using a
166 150 mm × 2.1 mm × 1.7 µm ACQUITY BEH C18 column. The mobile phase was composed of
167 solvent A (0.05% formic acid in water) and solvent B (0.05% formic acid in acetonitrile) at a
168 constant flow of 0.4 mLmin⁻¹. The gradient was programmed to increase the amount of B from 0 %
169 to 100% in 7.5 min, with stabilization at 100% for 1.5 min before returning to the initial conditions
170 (0% B) in 0.3 min. These conditions were maintained for 15 min. Mass spectrometry detection
171 was done with a Quattro Premier XE MS/MS (Waters, Guyancourt, France) fitted with an ESI
172 interface and controlled by MassLynx software. Typical interface conditions were optimized for
173 maximum intensity of the precursor ions as follows: nebulizer and desolvation (drying gas, N₂)
174 flows were set at 650 and 150 Lh⁻¹, respectively; source block and desolvation temperatures were
175 100 and 350 °C, respectively. The ESI polarity ionization mode was set individually for each target
176 compound. Argon was used as collision gas at a pressure of 3.7×10⁻³ mBar. Mass spectra were
177 performed in the multiple reaction-monitoring mode (MRM). The mass-spectrum acquisition of
178 each compound was done by recording two characteristic fragments: a transition one was used for
179 quantitation and the other for confirmation.

180 **Stability of pesticides in the aqueous phase**

181 During the 21 days of the experiment, the aqueous concentration of pesticides in the tank was
182 monitored at each time the POCIS were removed. If concentrations are kept relatively constant
183 during laboratory calibration, the sampling rate for each pesticide can be calculated when
184 accumulation in the sampler follows a linear pattern. The results showed a relatively constant
185 chemical concentration (R.S.D = 3–12%) in the exposure tank throughout the experiment, with
186 average concentrations ranging from 568 ng L⁻¹ (penconazole) to 1337 ng L⁻¹ (DIA) (Table
187 2). Average concentrations presented in table 2 concern mean values calculated from water
188 sampled in triplicate at the 5th, 9th and 15th day of exposure (9 water samples) and used for
189 calculations.

190 **Sampling rate calculation**

191 Accumulation of contaminants by passive samplers typically follows first-order kinetics, which
192 includes an initial integrative phase, followed by curvilinear and equilibrium-partitioning phases.
193 POCIS requires a relatively long sampling time before reaching equilibrium, and accumulation
194 thus tends to remain for a long period after deployment in the integrative phase when analyte
195 uptake is linear. In the linear region of POCIS uptake, the amount of a chemical accumulated in
196 the sampler (M) is described by equation (1):

$$197 \qquad M = C_w R_s t \qquad (1)$$

198 where R_s is the sampling rate (Lday⁻¹), C_w is the concentration of the compound in water (ngL⁻¹)
199 and t the exposure time (day).

200 The experimental data obtained from the laboratory calibration tests were used for calculating the
201 sampling rates (R_s) of the target pesticides according to equation (1). To simplify the calculation of
202 R_s , the regression line for each pesticide was fitted through the origin. A linear regression model
203 with zero intercept was also used in other studies (Mazzella et al. 2007; Arditoglou and Voutsas
204 2008; Martínez Bueno et al. 2009). For each pesticide, the sampling rate was determined by
205 dividing the slope of the linear regression curve by the mean aqueous concentration for the
206 selected compounds during the first 15-days exposure.

207 The sampling rate of each compound was calculated by dividing the slope of the uptake curve
208 plotted for 15 days exposure by the mean aqueous concentration of the corresponding compound
209 computed for the similar exposure time, which corresponds to an average of 9 water samples. As
210 the experience of analytes uptake by POCIS has been done in triplicate, the mean and standard
211 deviation of R_s for each compound was calculated by taking in account the values obtained for the
212 POCIS in triplicate.

213

214 **Results and discussion**

215 **Pesticide uptake kinetics by POCIS**

216 Characteristic pesticide uptake curves for the pharm-POCIS after an exposure of 5, 9, 15 and 21
217 days in the spiked tap water under water flow over the POCIS conditions are shown in figure 1.
218 The results showed that for most of the studied compounds, the uptake in POCIS follows a linear
219 pattern until 15 days with an equilibrium state reached after a 21-day exposure. However, for three
220 compounds (metalaxyl, azoxystrobin, terbuthylazine), the accumulation in POCIS remained
221 linear for the whole 21-day experiment.

222 **Determining sampling rates**

223 The correlation coefficients of the linear regressions for most pesticides were acceptable, with
224 values from 0.7924 (DEA) to 0.9706 (azoxystrobin) (Table 3). Pesticide sampling rates expressed
225 in $\text{mL g}^{-1} \text{d}^{-1}$ and mL day^{-1} (computed for 200 mg of HLB sorbent phase) are given in Table 3. The
226 calculated R_s values ranged from 67.9 to 279 mL day^{-1} with $\text{RSD} \leq 17\%$. The lowest sampling rate
227 value was obtained for the most polar compound DIA ($\log K_{ow} = 1.2$), demonstrating that POCIS is
228 less effective for sequestering this molecule. A similar result was observed by Mazzella et al.
229 (2007) when calibrating pharm-POCIS in the laboratory. Penconazole showed the highest R_s value
230 (279 mL day^{-1}).

231 **Comparison of sampling rates**

232 An overview of our sampling rates and those of previous studies is given in Table 4 concerning
233 only experiments fitting with our own experiment in term of exposure conditions (water renewal
234 and non-quiescent exposure). For several pesticides, the sampling-rate values from our study were

similar to those obtained by authors (Mazzella et al. 2007; Hernando et al. 2007; Lissalde et al. 2011) who used a similar experimental set-up for pharm-POCIS calibration as ours. The R_s values we obtained for terbuthylazine and linuron were 1.5 and 1.7 times lower, respectively, than those reported by Mazzella et al. (2007) and Lissalde et al. (2011) even if the results for the other compounds are very closed. This difference cannot be explained and those both results seem to be not reliable because of the important difference of sampling rate compared to the other compounds owing to the same chemical group (140ml day for linuron instead of respectively 256.7 and 236.5 for diuron and isoproturon). Our sampling rates were of the same order of magnitude as those obtained by Thomatou et al. (2011), even though these authors used a pest-POCIS in a stirred-renewal exposure design for a calibration experiment using natural lake water. Sampling-rate values for diuron from other studies were systematically below our values: 3 times lower for Martínez Bueno et al. (2009) and 5.7 times lower for Alvarez et al. (2004), respectively. The experimental set-ups used by these authors use a static system stirred by a magnetic bar, but their salinity values were quite different.

It is thus clear that great disparities exist between the methods used for calibrating POCIS. Detailed descriptions of experimental parameters and R_s comparisons during POCIS calibrations for several pesticides and other chemicals are given by Munaron et al. (2011) and Morin et al. (2012). For the pesticides, R_s values are comparable to the present study and the observed differences can be explained by considering the different parameters, such as the experimental set-up for calibration (such as water renewal..), water-temperature and turbulence conditions that affect the sampling rate, the POCIS configuration and the value of its surface area - sorbent-phase ratio. Large differences between the experimental conditions used may lead to large variations in R_s values. As described by Morin et al. (2012), there is a lot of studies in which all the needed information (speed of rotation, water temperature, calibration methods...) are not clearly expressed. These discrepancies highlight the need for standardized POCIS manufacture and calibration procedures in order to compare and use R_s data obtained in the different studies. A first EN-ISO document (EN-ISO 2011) is already available, but this document gives a general guidance and could not constitute a basis for use as a standard. It should be implemented by definitions of exposure conditions that need to be respected or explicated to enhance reliability of obtained data.

Relationship between sampling rates and physical-chemical properties

A non-linear regression was performed for sampling rates determined from the calibration experiments, using a second-order polynomial function of $\log K_{ow}$ ($Y = -44.701 X^2 + 289.14 X - 199.69$; $r^2=0.9221$) (Fig. 2). To obtain a better correlation, the R_s values of metalaxyl, propyzamide and azoxystrobin were not plotted, even though their mean R_s values are included in the graph. The quadratic curve shows an increase of the sampling rates with the hydrophobicity ($\log K_{ow}$), reaching a plateau for compounds with $\log K_{ow}$ ranging from 1.15 to 3.7. Mazzella et al.

(2007) and Thomatou et al. (2011) when calibrating POCIS for polar pesticides established a similar relationship. Arditoglou and Voutsas (2008) when working with steroid and phenolic compounds found no clear correlation, but they showed a similarity in sampling-rate values across a range of hydrophobic molecules. The observed plateau from our study, which describes a similarity of POCIS uptake over a range of hydrophobicity ($\log K_{ow}$: 1.7-3.7), was also reported for pesticides on polar Chemcatchers® (Shaw et al. 2009) for the uptake by the RPS-SDB sorbent phase for the compounds studied ($\log K_{ow}$: 1.78–4.0). According to Alvarez et al. (2007b), POCIS are able to accumulate compounds with $\log K_{ow} < 3$. The selected pesticides in this work have $\log K_{ow}$ values that range from 1.15 (DIA) to 3.72 (penconazole). For all compounds studied except DIA, we obtained sampling rates of over 100 mL day⁻¹. The sampling rates generated by Arditoglou and Voutsas (2008) when working with steroid and phenolic compounds ($\log K_{ow}$: 2.81-4.67) ranged from 90 to 221 mL day⁻¹; their experimental data suggest that POCIS can be used even with compounds whose $\log K_{ow}$ is over 4. The limits of POCIS performance and sampling efficiency should be defined by considering compounds from the same chemical groups. Fig. 3 focuses on the range of compound sampling rates on the plateau of the curve described above (Fig. 2). The mean sampling rate calculated for the 13 compounds is 239 mL day⁻¹ with a relative standard deviation of 14%. Considering that the determination of average concentrations by passive sampling with an RSD of 20 % in environmental measurements is acceptable, the main idea could be to use a unique sampling rate value for calculating the TWA concentration of any pesticide in the aquatic environment whose polarity falls in the $\log K_{ow}$ interval determined above. In order to further develop this point, other experiments are needed with a large number of compounds belonging to different chemical classes and with a wide range of polarity values. R_s variability for molecules falling in the proposed $\log K_{ow}$ interval is much lower than the R_s variability for various conditions of temperature and agitation. The demonstration is highlighted by the result presented in figure 3. It is also possible to consider an “average global” R_s for all compound owing to the $\log K_{ow}$ intervals and to focus the research on developing correction of lab- R_s to fit with environmental conditions. Different ways could be investigated: use of PRC compounds (Mazzella 2007), use of passive flow monitor (O'Brien, 2012) already applied for SPMD (semipermeable membrane device) and PDMS (polydimethylsiloxan) passive samplers and which could be useful for POCIS. It will be more interesting to focus the research on developing correction of lab- R_s to fit with environmental conditions with a validation by in-situ calibrations.

Conclusions

The quantitative use of POCIS requires suitable sampling-rate values for each compound of interest. Very few sampling-rate data are available for estimating ambient contaminant concentrations from analyte levels in exposed POCIS.

A laboratory experiment based on a flow-through exposure system was designed and implemented for the calibration of POCIS (pharmaceutical configuration), and the sampling rates of 17 polar

pesticides were determined. The calibration revealed integrative uptakes of the target pesticides for 15 and 21 days. The obtained sampling rates ranged from 67.9 to 279 mL day⁻¹ and demonstrated the effectiveness of POCIS for achieving a lower quantification limit for the selected compounds, compared to standard active-sampling methods. For an exposure duration of 15 days, we have the equivalence of a 1 to 4 L grab water sample, depending on the targeted compounds.

The calibration results obtained showed a similar POCIS sampling capacity for several compounds belonging to different chemical classes, with a logK_{ow} ranging from 1.7 to 3.7. The use of an average laboratory-R_s could be considered for determining the TWA concentration in water for a given compound, whose polarity falls within a defined interval with other compounds that have similar sampling-rate values. This Lab-R_s need to be improved and corrected (by PRC or passive flow monitor) to fit better with realistic environmental conditions.

Acknowledgements

The authors would like to thank C. Coureau for her valuable assistance in laboratory analyses and M. Kleuvers for his precious help for the english text correction. We also thank the Carnot institute (BRGM) and the engineering school of Alès (EMA) for financial support of this study, which is a part of a PhD research.

References

- Alvarez DA (1999) Development of an integrative sampling device for hydrophilic organic contaminants in aquatic environments, Missouri-Columbia, Columbia, 160 pp
- Alvarez DA, Petty JD, Huckins JN, Jones-Lepp TL, Getting DT, Goddard JP, Manahan SE (2004) Development of a passive, in situ, integrative sampler for hydrophilic organic contaminants in aquatic environments. *Environ. Toxicol. and Chem.* 23:1640-1648
- Alvarez DA, Huckins JN, Petty JD, Jones-Lepp T, Stuer-Lauridsen F, Getting DT, Goddard JP, Gravell A (2007a) Tool for monitoring hydrophilic contaminants in water: polar organic chemical integrative sampler (POCIS). In: Greenwood R, Mills GA, Vrana B (Editors), *Comprehensive Analytical Chemistry. Passive Sampling Techniques in Environmental Monitoring*. Elsevier, pp. 171-197
- Alvarez DA, Huckins JN, Petty JD, Jones-Lepp T, Stuer-Lauridsen F, Getting DT, Goddard JP, Gravell A (2007b) Chapter 8 Tool for monitoring hydrophilic contaminants in water: polar organic chemical integrative sampler (POCIS). In: Greenwood R, Mills GA, Vrana B (Editors), *Passive Sampling Techniques in Environmental Monitoring. Comprehensive Analytical Chemistry*. Elsevier, pp. 171

346 Arditsoglou A, Voutsas D (2008) Passive sampling of selected endocrine disrupting compounds
 347 using polar organic chemical integrative samplers. *Environ.Pollut.* 156:316-324
 348 Beltran J, Lopez FJ, Hernandez F (1993) Solid-phase extraction of pesticide residues from ground
 349 water: comparison between extraction cartridges and extraction discs. *Anal.Chim.Acta* 283:297-
 350 303
 351 Greenwood R, Mills GA, Vrana B (2007) Passive sampling techniques in environmental
 352 monitoring. *Comprehensive analytical chemistry*. Elsevier
 353 ISO 5667-23:2011 Water quality -- Sampling -- Part 23: Guidance on passive sampling in surface
 354 waters, 23p
 355 Kingston JK, Greenwood R, Mills GA, Morrison GM, Persson LB (2000) Development of a novel
 356 passive sampling system for the time-averaged measurement of a range of organic pollutants in
 357 aquatic environments. *J. Environ.Monit.* 2:487-495
 358 Kot A, Zabiegała B, Namiesnik J (2000) Passive sampling for long-term monitoring of organic
 359 pollutants in water. *Trend Anal Chem* 19:446-459
 360 Li H, Helm PA, Paterson G, Metcalfe CD (2011) The effects of dissolved organic matter and pH
 361 on sampling rates for polar organic chemical integrative samplers (POCIS). *Chemosphere* 83:271-
 362 280
 363 Liess M, Schulz R, Liess MHD, Rother B, Kreuzig R (1999) Determination of insecticide
 364 contamination in agricultural headwater streams. *Water Res.* 33:239-247
 365 Lissalde S, Mazzella N, Fauvelle V, Delmas François, Mazellier P, Legube B (2011) Liquid
 366 chromatography coupled with tandem mass spectrometry method for thirty-three pesticides in
 367 natural water and comparison of performance between classical solid phase extraction and passive
 368 sampling approaches. *J Chromatogr. A* 1218:1492-1502
 369 Hernando M.D, Lambropoulou D , Konstantinou I, Bueno MMJ, Gabrielides D, Alba FAR,
 370 Albanis T (2007) Passive sampling techniques for monitoring organic contaminants in aquaculture
 371 environment. *Proceedings of the 10th International Conference on Environmental Science and*
 372 *Technology, Kos Island, Greece, 5-7-September 2007.*
 373 MacLeod S, McClure E, Wong C (2007) Laboratory calibration and field deployment of the Polar
 374 Organic Chemical Integrative Sampler for pharmaceuticals and personal care products in
 375 wastewater and surface water. *Environ. Toxicol.and Chem.*, pp. 2517–2529
 376 MartínezBueno MJ, Hernando MD, Agüera A, Fernández-Alba AR (2009) Application of passive
 377 sampling devices for screening of micro-pollutants in marine aquaculture using LC-MS/MS.
 378 *Talanta* 77:1518-1527
 379 Mazzella N, Dubernet JF, Delmas F (2007) Determination of kinetic and equilibrium regimes in
 380 the operation of polar organic chemical integrative samplers: Application to the passive sampling
 381 of the polar herbicides in aquatic environments. *J Chromatogr A* 1154:42-51
 382 Morin N, Miège Cécile, Coquery M, Randon Jérôme (2012) Chemical calibration, performance,
 383 validation and applications of the polar organic chemical integrative sampler (POCIS) in aquatic
 384 environments. *Trend Anal Chem* 36:144

411

412

413 Table 1 Physico-chemical properties of selected compounds

Compound	Cas number	type	Chemical class	Chemical formula	Molecular weight (g/mol)	LogK _{ow}	pKa
Azoxystrobine	131860-33-8	fungicide	strobilurine	C ₂₂ H ₁₇ N ₃ O ₅	403,4	2,5	nd
Metalaxyl	57837-19-1	fungicide	amide	C ₁₅ H ₂₁ NO ₄	279,3	1,7	nd
Penconazole	66246-88-6	fungicide	azole	C ₁₃ H ₁₅ Cl ₂ N ₃	284,2	3,7	1,5
Acetochlor	34256-82-1	herbicide	chloracetanilide	C ₁₄ H ₂₀ ClNO ₂	269,8	3,0	nd
Alachlor	15972-60-8	herbicide	chloracetanilide	C ₁₄ H ₂₀ ClNO ₂	269,8	3,5	nd
Atrazin	1912-24-9	herbicide	triazine	C ₈ H ₁₄ ClN ₅	215,7	2,6	1,7
Chlortoluron	15545-48-9	herbicide	urea	C ₁₀ H ₁₃ ClN ₂ O	212,7	2,4	nd
DEA	6190-65-4	herbicide	triazine metabolite	C ₆ H ₁₀ ClN ₅	187,6	1,5	nd
DET	30125-63-4	herbicide	triazine metabolite	C ₇ H ₁₂ ClN ₅	201,7	2,3	nd
DIA	1007-28-9	herbicide	triazine metabolite	C ₅ H ₈ ClN ₅	173,6	1,2	nd
Diuron	330-54-1	herbicide	urea	C ₉ H ₁₀ Cl ₂ N ₂ O	233,1	2,7	nd
Isoproturon	34123-59-6	herbicide	urea	C ₁₂ H ₁₈ N ₂ O	206,3	2,9	nd
Linuron	330-55-2	herbicide	urea	C ₉ H ₁₀ Cl ₂ N ₂ O ₂	249,1	3,2	nd
Metolachlor	51218-45-2	herbicide	chloracetanilide	C ₁₅ H ₂₂ ClNO ₂	283,8	3,1	nd
Propyzamide	23950-58-5	herbicide	amide	C ₁₂ H ₁₁ Cl ₂ NO	256,1	3,4	nd
Simazin	122-34-9	herbicide	triazine	C ₇ H ₁₂ ClN ₅	201,7	2,2	1,6
terbuthylazin	5915-41-3	herbicide	triazine	C ₉ H ₁₆ ClN ₅	229,7	3,2	2

414

415

416

417

Table 2 Selected pesticides mean aqueous concentrations in the tank for 15 days experiment

	average concentration (µg/L) (n=9)	RSD (%)
acetochlor	0,843	7%
alachlor	0,790	6%
atrazin	0,880	3%
diuron	0,890	12%
linuron	1,020	8%
chlortoluron	1,045	8%
desethylatrazin	1,220	4%
desethylterbutylazin	0,971	3%
desisopropylatrazin	1,337	5%
isoproturon	1,199	7%
metolachlor	0,964	5%
propyzamide	1,047	6%
simazin	0,918	4%
terbuthylazin	0,973	4%
azoxystrobine	0,586	7%
metalaxyl	0,658	6%
penconazole	0,568	4%

418

419

Compounds	logKow	Rs (mLday ⁻¹ g ⁻¹) (n=3)	Rs (mLday ⁻¹) (n=3)	RSD (%)	Correlation coefficient (r ²)
DIA	1,2	339,4	67,9	12	0,9221
DEA	1,5	664,7	132,9	14	0,7924
Simazine	2,2	1088,6	217,7	15	0,8377
DET	2,3	1268,5	253,7	14	0,8404
Atrazine	2,7	1269,1	253,8	14	0,8588
Terbutylazine	3,2	816,3	163,3	14	0,8726
Acetochlor	3	1115,7	223,1	9	0,9599
Metolachlor	3,1	1341	268,2	14	0,8655
Alachlor	3,5	1277,7	255,5	12	0,8572
Chlortoluron	2,4	1257,4	251,5	12	0,876
Isoproturon	2,5	1182,5	236,5	14	0,8378
Diuron	2,7	1283,7	256,7	17	0,8092
Linuron	3,2	702,5	140,5	14	0,9231
Metalaxyl	1,7	1321	264,2	15	0,8497
Azoxystrobin	2,5	768,8	153,8	14	0,9706
Propyzamide	3,4	973,9	194,8	15	0,9038
Penconazole	3,7	1394,8	279	8	0,9429

421

422


Table 4 Comparison of our sampling rates (R_s in mLday⁻¹) and previous studies using water renewal conditions

Compounds	This study	(Mazzella et al. 2007)	(Lissalde et al. 2011)	Hernando et al, (2007)	(Thomatou et al. 2011)	(Martínez Bueno et al. 2009)	(Alvarez et al. 2007a)
Experimental set-up	Tank with a rotary exposure system	Aquarium for static exposure	Aquarium for static exposure	Aquarium for static exposure	Beaker under stirring conditions	Beaker under stirring conditions	Beaker under stirring conditions
Type of water and sampler	Tap water pharm-POCIS	Tap water pharm-POCIS	Tap water pharm-POCIS	Sea water pharm-POCIS	Lake water pest-POCIS	Sea water pharm-POCIS	Water quality not specified pest-POCIS
Atrazine	253.8	239	228	192	245	214	-
DEA	132.9	121.5	173	146	162	-	-
DET	253.7	205	213	-	-	-	-
Simazine	217.7	210.3	199	239	178	223	-
DIA	67.9	63.6	176	-	-	-	-
Acetochlor	223.1	225.2	241	-	-	-	-
Diuron	256.7	247.3	199	256	-	86	45
Isoproturon	236.5	217.6	167	-	-	-	86
Alachlor	255.5	-	205	247	230	-	-
Metolachlor	268.2	-	182	232	230	-	-
Azoxystrobin	153.8	-	179	-	-	-	-
Propyzamide	194.8	-	-	-	-	-	-
Terbuthylazine	163.3	250.7	238	-	-	-	-
Linuron	140.5	235.9	204	-	-	-	-

423

424

425

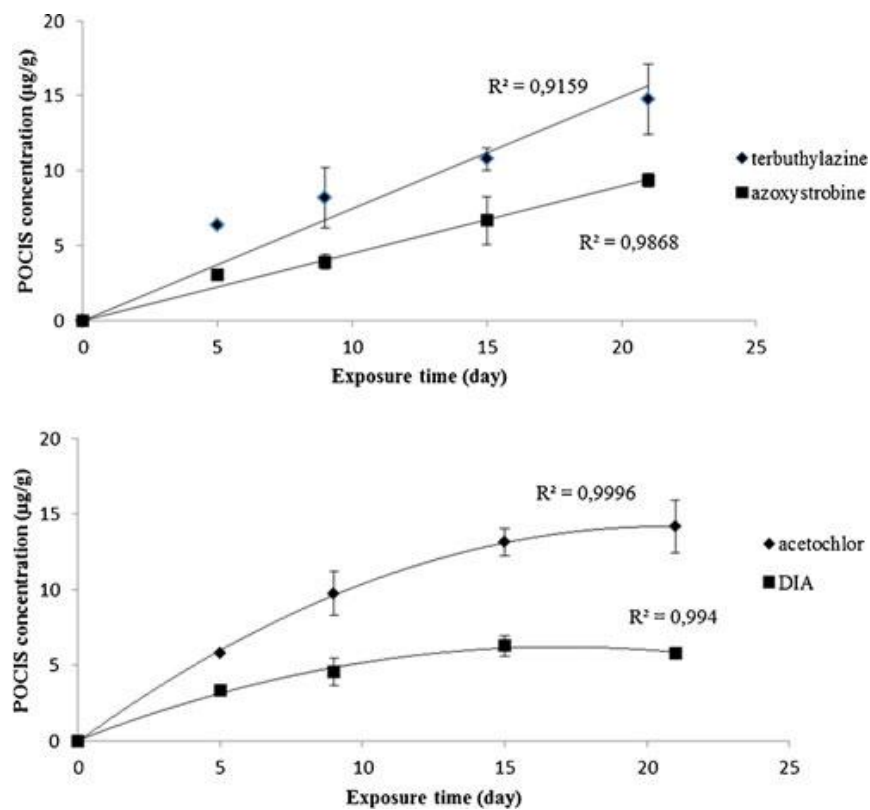

426

427

428

429

430

431

Fig 1 Some examples of pesticides uptake by POCIS over a period of 21 days exposure

432

433

434

435

436

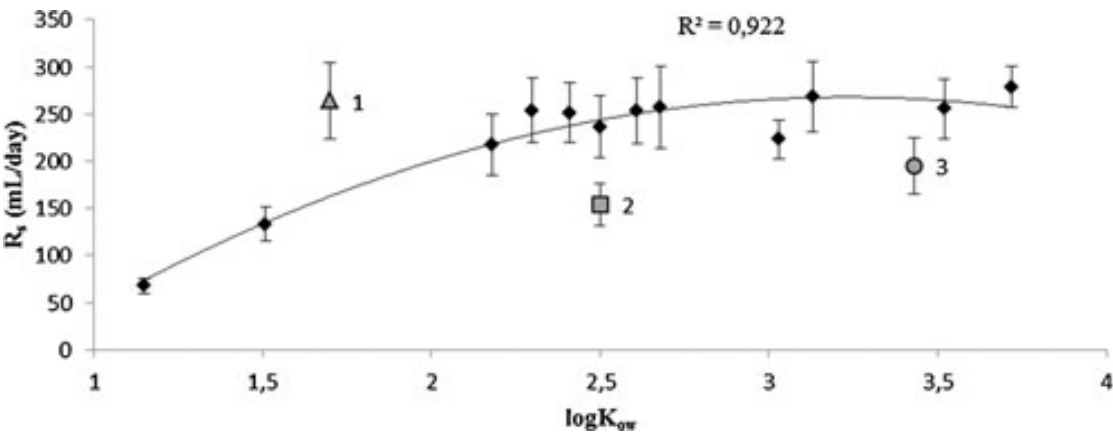


Fig 2 Relationship between sampling rates (R_s) and $\log K_{ow}$. Metalaxyl (1), azoxystrobine (2), and propyzamide (3)

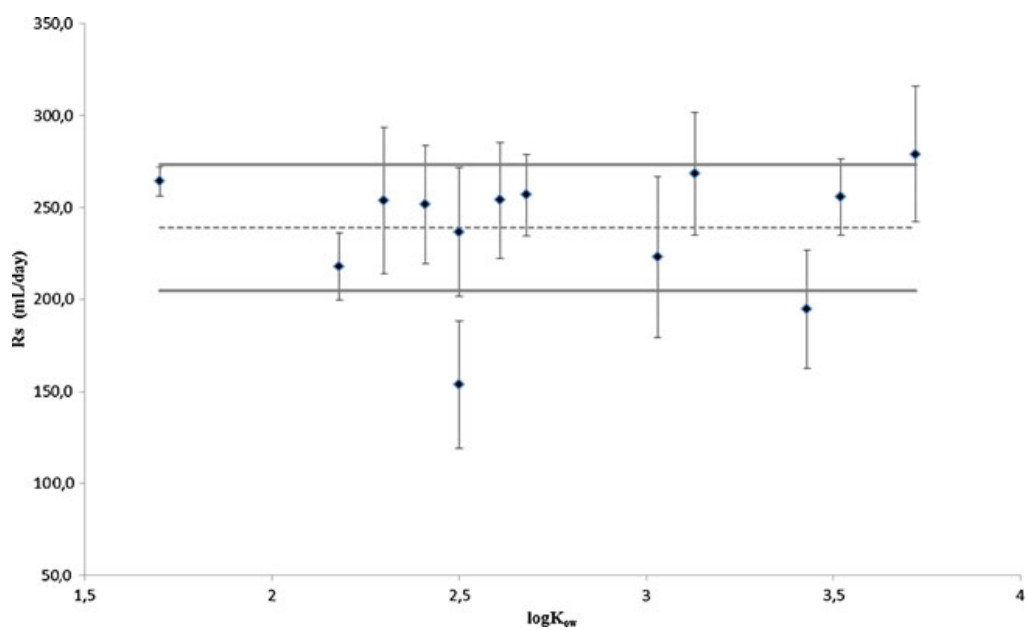


Fig 3 Average sampling rate of POCIS for pesticides whose polarity varies from 1.7 to 3.7. Discontinuous line of the figure represents the mean Rs value. Continuous lines represent the 20 % of RSD calculated from the 13 Rs values